

## BT-3 Digital Thermometer and Hygrometer

### Features:


- Measure and display the indoor temperature and indoor humidity
- Automatically memorize the Max./Min. values of temperature and humidity
- Switch between °C/°F
- Clock function and alarming function
- 12/24 hour mode switch
- Recovery function on the Max./Min. values

### Technical parameters:

- Indoor temperature: 0°C~50°C (32°F~122°F) outdoor temperature: -50°C~70°C (-58°F~158°F)
- Humidity measuring range: 20%~99%(Relative humidity)
- Resolution: Temperature: 0.1°C; Humidity: 1%RH
- Power supply: one 7# alkaline battery
- Operation environment: Temperature: 0°C~50°C; Humidity: 5%~85%RH

### Operation instruction:

- **MAX/MIN:** Press this button when display indoor temperature will show MAX temperature, then press again will show MIN temperature, keep pressing 2 seconds will clear all the memory
- **MODE:** COMMON MODE: Switch between time and Alarm clock  
COMMON MODE: keep pressing 3 seconds, will enter into set mode, Operation sequence is :the hour - minutes - confirm  
Alarm clock Mode: keep pressing 3 seconds, will enter into Alarm clock Mode, Operation sequence is :the hour - minutes - confirm
- **ADJ:** SET MODE: Add value  
COMMON MODE: Clock display: Switch 12/24 hours
- **CLEAR:** the maximum and minimum ( MAX/MIN ) memory
- **RESET:** Reset function: Press this key parameters can be restored to factory defaults
- **C/F:** Switch between C/F  
Clock set : Keep pressing MODE button 3 seconds when display Clock, will enter into time Set mode, when "Minute Value" blinks, press ADJ key to increase the Minute value., then press Mode Key again the "hour" will blinks and press ADJ to increase the Hour Value.  
ALARM CLOCK SET: Press Mode key for 3 seconds will enter into setting mode, when "Minute" blinks, press ADJ key to increase Minute Value. If press the key again, then "HOUR" will Blinks, press ADJ to increase Hour Value
- Comfort indicators will display the level as comfortable, wet or dry. The table is shown below:

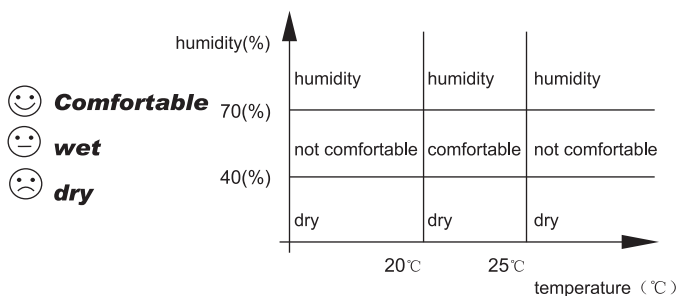

### Contact :

**EASTERN ENERGY CO.,LTD. (HEAD OFFICE)**

40/4 Vitoondumri Rd., Banbueng, Banbueng, Chonburi 20170

Tel: 0-3844-6117 Fax: 0-3844-6200 Email: info@ete.co.th