


**DIGITAL TIRE PRESSURE GAUGE**  
**MODEL TP-5**  
**INSTRUCTION MANUAL**

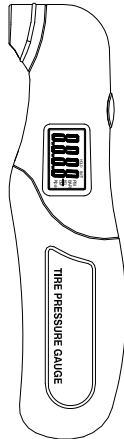

**I INSTRUCTION**

The TIRE PRESSUR GAUGE is compact, tough and easy to handle owing to its construction.

Much easier use than conventional air gauges.

**II FEATURES**

- PEAK&HOLD function
- White LED lighted tip helps you find the tire stem easily.
- LCD Back-light helps you read the value easily.
- Auto power off 20 second.

**III SPECIFICATIONS**

- Display :3-1/2 digit LCD
- Measuring Range: 5 –100 PSI
- Accuracy: (1%±1)1PSI
- Size(H×W×D):156mm×42mm×20mm
- Weight: 77g.
- Accessories: Two 1.5V battery.



**Contact :**

**EASTERN ENERGY CO.,LTD. (HEAD OFFICE)**

40/4 Vitoondumri Rd., Banbueng, Banbueng, Chonburi 20170

Tel: 0-3844-6117, Fax: 0-3844-6200

Email: info@ete.co.th / sale@ete.co.th

Web: www.eastern-energy.com

**EASTERN ENERGY CO.,LTD. (RANGSIT BRANCH)**


801/192 Moo.8 Kukot, Lamlukka, Pathumthani 12130

Tel: 0-2531-3833, Fax: 0-2531-3833

Email: info@ete.co.th / sale@ete.co.th

Web: www.eastern-energy.com

#### IV NAME OF PARTS AND POSITIONS

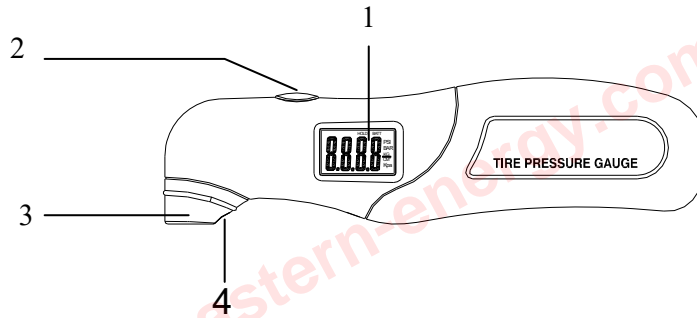

1. LCD Display: 3-1/2digit displays
2. key: Turn on the meter ,select LED or LCD Back-light.
3. Spiracle: plug in the tire.
4. LED light: helps you find the tire stem easily.

#### V OPERATING INSTRUCTIONS

1. Power-up: Press the yellow key to turn the meter ON  
LCD displays 0.0 PSI.
2. Take the tire gauge spiracle at the tire stem, then the  
Tire gauge will memorize the maximal pressure value.
3. Press yellow pushbutton to select the LED or the  
Back-light.  
(Light LED ON ->Back Light ON -> Both OFF...)
4. AUTO power off after leaving unused 20 second

#### VI BATTERY REPLACEMENT

1. As the battery power is not sufficient, LCD will display  
low battery ("BATT"), and replacement of one new  
battery is required.
2. After turning off the meter, disconnect the battery cover  
  
with a screwier.
3. Disconnect the battery from the instrument and replace  
it with a standard 9V battery and go for the cover.



#### Contact :

**EASTERN ENERGY CO.,LTD. (HEAD OFFICE)**  
40/4 Vitoondumri Rd., Banbueng, Banbueng, Chonburi 20170  
Tel: 0-3844-6117, Fax: 0-3844-6200  
Email: info@ete.co.th / sale@ete.co.th  
Web: www.eastern-energy.com

**EASTERN ENERGY CO.,LTD. (RANGSIT BRANCH)**  
801/192 Moo.8 Kukot, Lamlukka, Pathumthani 12130  
Tel: 0-2531-3833, Fax: 0-2531-3833  
Email: info@ete.co.th / sale@ete.co.th  
Web: www.eastern-energy.com